

Routine Gate Adjustment Instructions

Due to expansion and contraction with the weather, your gate will require occasional adjustments to maintain smooth operation.


A. To adjust a sagging gate, or to shift panel in the opening, loosen the hinge nuts with an 11/16" wrench.

B. Loosen or tighten the nuts in the direction shown. Lift or push panel to slide the hinge.


C. Retighten the hinge nuts.

If there is no more adjustment available due to a sagging post, you can cut your top rail and shift the post over to regain some play.


Shift panel left

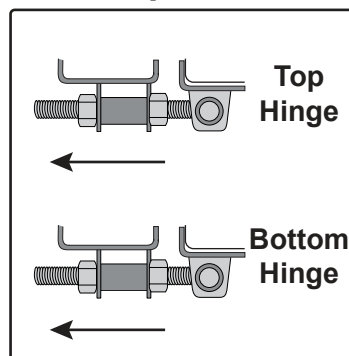

Shift panel right

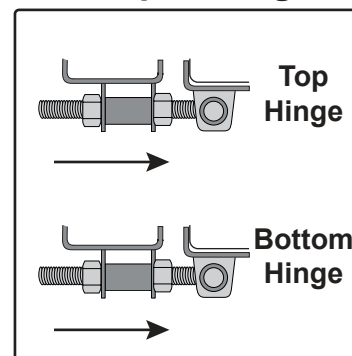

Raise latch side

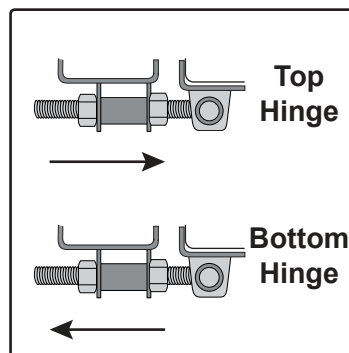

Lower latch side

