


Before installing the pipe and post donuts, verify the wall can support a privacy fence. Consult with an engineer if necessary.

STEP 1


Measure and mark post centers, drill holes and set pipes.

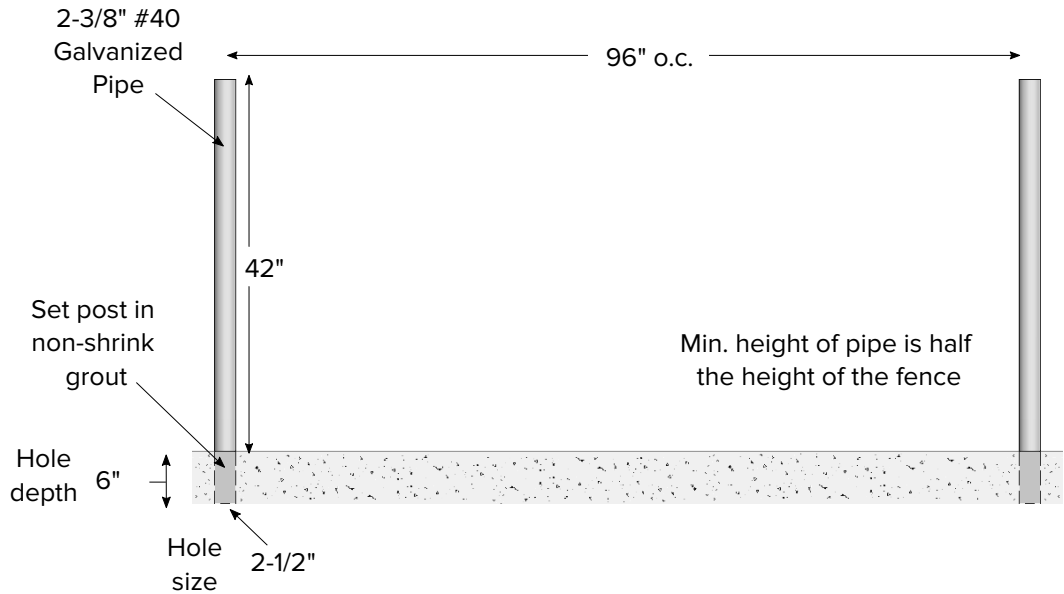

STEP 2

Slide two post donuts onto each post and align them.

Align post and donut then fasten.

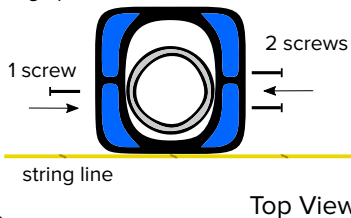

Attach the top post donut on each end post using (3) 1" x #14 self-tapping screws.


Top view of wall



Run a string line between these donuts, using the string to set the remaining post donuts so they are all inline with each other.

STEP 3


Plumb donuts and attach bottom.

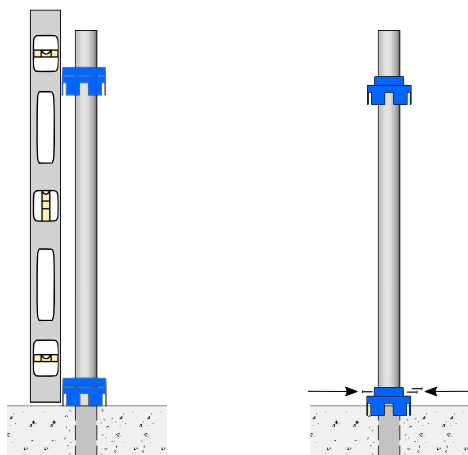

After attaching the top post donuts, use a level to position the lower donuts and attach them to the post using (3) 1" screws.

STEP 4

Sleeve a Trex post over the pipe and mounts.

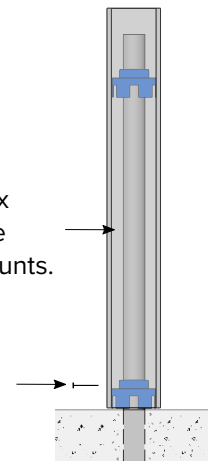

Fasten (1) 3" x #14 self-tapping screw through the Trex post into the bottom donut and pipe. NOTE: Use 1-1/4" screws for lower fence bracket to avoid interference with pipe.